

21-33190-22

Contact, Pin, Concentric Twinaxial Type, (MIL-DTL-38999 Series I & III)
Installation Instructions


Note: 21-33190-22 Contact with Piggyback Grommet seal is designed for use in MIL-DTL-38999 Series I and III standard connector arrangements 17-2, 21-75, 21-79, 25-7 and 25-46 only. For 21-33190-22, the Piggyback Grommet Seal (part number 21-33321-5 or -6) is applied with the connector assembly.

1. Assemble Piggyback Grommet Seal: See Figure 1.
2. Strip cable per Figure 2.
3. Bushing and shield location:
 - 3.1 Slide crimp bushing over cable jacket, large end first until small end is even with cable jacket.
 - 3.2 Flare outer shield back over crimp bushing.
 - 3.3 Unwrap conductive foil and pull back over first shield and crimp bushing. Flatten foil.
 - 3.4 Flare inner shield back over outer shield and conductive foil.
 - 3.5 Cut off fillers as close to shield as possible.
4. Assemble spacer insulator over blue and white wire.
5. Bend white wire away from blue wire and assemble back insulator over blue wire and butt firmly against spacer insulator. Align slot with white wire.
6. Fit inner pin contact over blue wire conductor. (See Fig. 6) and crimp with M22520/2-01 tool and M22520/2-37 positioner. Use tool selector setting number five (5).
7. Assemble inner front insulator over center pin contact being careful to align slot with white wire as insulator is slid back until it butts firmly.
8. Slide intermediate contact over inner front insulator being sure all strands of the white conductor enter small hole in the intermediate contact large end. Slot in intermediate contact should be 180 degrees opposite white wire.
9. Crimp intermediate contact wire well using tool M22520/5-01 and die set M22520/5-200. (Die set has a blade for location of slot and a double indent portion to crimp wire side).
10. Slide outer pin contact, with insulator installed, over assembly until it butts firmly. A small gap at the bushing will occur.
11. Crimp assembly, bushing and outer contact, with tool M22520/5-01 and die set M22520/5-200.
12. Insert the contact assembly into the connector grommet until it seats firmly. Tug slightly on wire to insure contact has properly seated.
13. Slide Piggyback grommet down cable until it butts firmly on contact.

L-1253-C
May 2002





FSCM 77820

21-33190-22

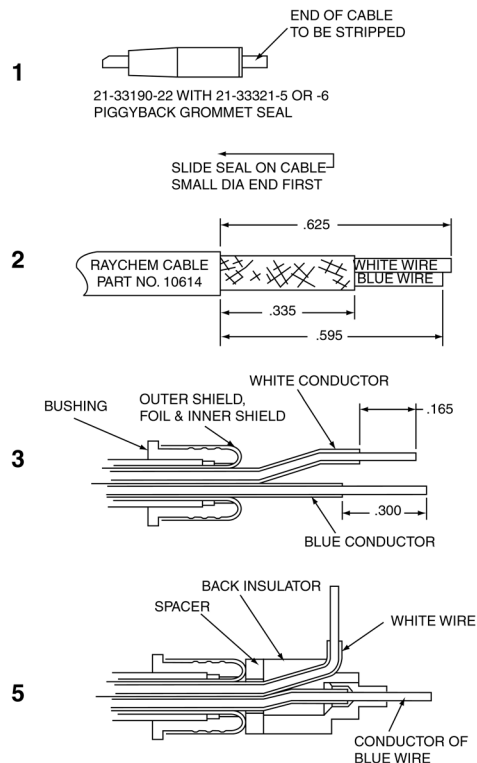

Amphenol

AMPHENOL CORPORATION
Amphenol Aerospace
40-60 Delaware Avenue
Sidney, New York 13838-1395
www.amphenol-aerospace.com

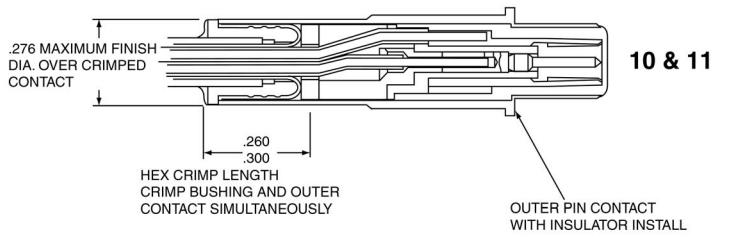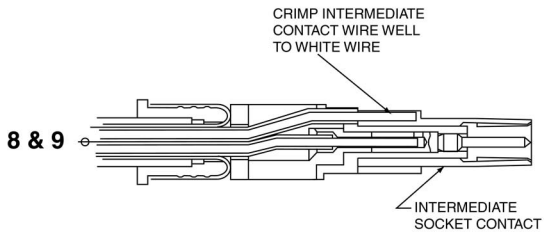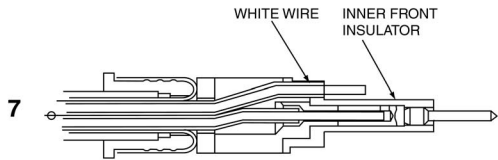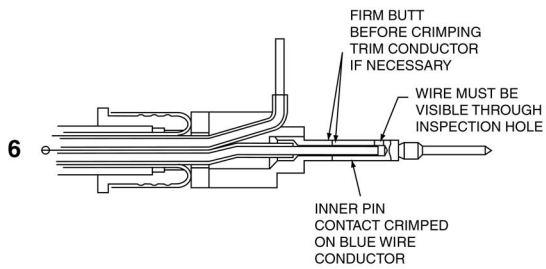

EQUIVALENT APPLICATION TOOLS		
DIE SET	POSITIONER	CONTACT REMOVAL
M22520/5-200 OR AMPHENOL® 11-12101 OR DANIELS Y631	M22520/2-37 OR AMPHENOL® 11-12102 OR DANIELS K709	DANIELS DRK 264-8