

**21-033470-281 (PIN)**  
**21-033471-281 (SOCKET)**


**21-033470-281 (PIN)**  
**21-033471-281 (SOCKET)**

Contact, Pin and Socket, Quadrax, Split Pair,

Type M38999 Series I & III Box Pattern, Size 8 Installation Instructions

See table on reverse side for quadrax cable recommended, tool selector settings, crimping tool, positioner and insertion/removal tool information.


- A 1. Cut cable for assembly of quadrax contacts. Note: Inner wire conductors must be in correct orientation during contact assembly.
- B 1. Rubber end first, slide piggyback grommet seal back over cable jackets (not illustrated)  
 2. Strip cable jacket to expose cable outer braid as illustrated. Ends must be cut cleanly and at right angles to the axial plane of the cable. Cable must not be deformed while making cuts.
- C 1. Comb out and flair cable braid to expose inner wire.  
 2. Trim inner wires as illustrated.
- D 1. Bring braid forward and join to make bullet front.  
 2. Slide crimp bushing, large diameter end first, over cable braid until cable jacket are flush with front of crimp bushing.
- E 1. Flair cable braid back over crimp bushing as illustrated to expose inner wires. Trim excess cable braid.  
 2. Cut inner wire with foil in place to dimension shown. Wire must be cut to equal length.  
 3. Strip individual differential pair foil shield as close to flaired cable braid as possible.  
 4. Strip inner wires to expose center conductors as illustrated. Wire must be stripped to equal length.
- F 1. Carefully splay inner wires perpendicular to the axis of the cable as illustrated  
 2. Assemble inner contact over cable center conductor until fully seated against inner wire insulation. Observe center conductor through the contact's wire inspection hole, to make certain conductor is properly positioned.  
 3. Crimp inner contact to center conductor using crimp tools listed in table on back. Repeat steps F2 and F3 until all inner contacts are crimped.

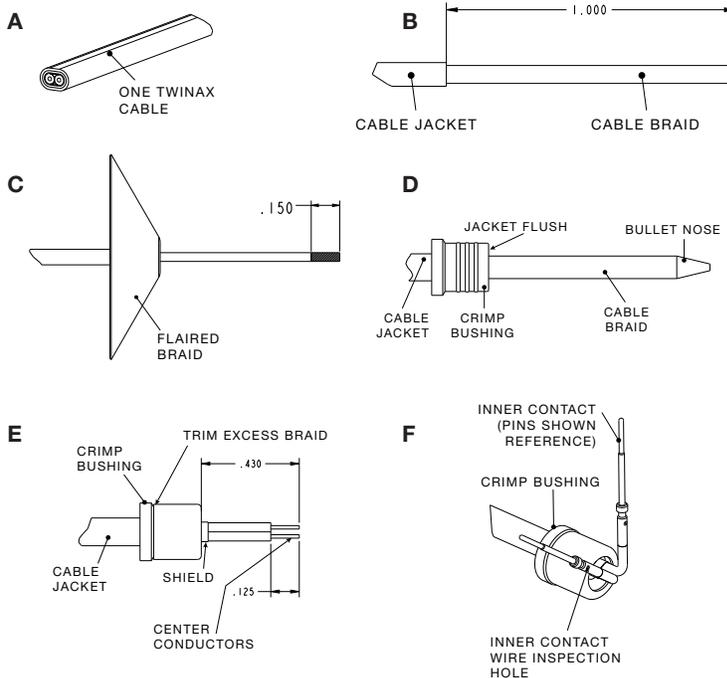

Continued on back  
**L-2119-HY**  
**July 2022**

**FSCM77820**


**SUGGESTED INNER CONTACT NUMBERING (MATING END SHOWN)**

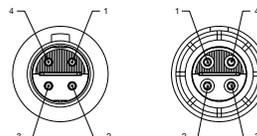

Amphenol Suggested Wiring		
Differential Pair	Inner ID	Wire Color
1	1	White
	4	White

**21-033470-201 (PIN)**  
**21-033471-201 (SOCKET)**

- G 1. Observe the black insulator's keyway. When the inner pin assembly is held in the vertical position (with inner pin contacts on top), the inner pin contact with the black insulator keyway to its right will be positioned at the inner contact ID #1 position as shown in the mating end view (for inner socket contacts, the black insulator keyway should be positioned to the left of the inner socket desired at the inner contact ID #1 position).
2. With inner contacts approximately aligned with the front insulator contact cavities (pair #1 inner contacts aligned with pair #1 insulator window, pair #2 inner contacts aligned with pair #2 insulator window), assemble front insulator over the inner contacts as shown, being careful to guide the inner contacts through the insulator cavities. The insulator must butt the crimp ferrule, and inner contact retention shoulders must click in front of the retention tines (inner contacts will lock in place).
- H 1. Hold insulator sandwich in position and use small pick to remove one "standard" contact retention clip.  
 2. Orient "rigid" retention clip such that internal retention features face mating end of contact assembly. Install clip by locking one rib into insulator retention slot then rotate until second rib locks into retention slot on opposite side of insulator. Ensure Contact retention undercut is lined up with retention clip retention features.  
 3. Repeat steps 1 and 2 to replace second "standard" retention clip with second "rigid" retention clip  
 \*\*Note: It is recommended to apply epoxy to contacts within insulator assembly due to cable "pistoning". Epoxy shall not interfere with inner socket interface nor be present on inner pin mating surface
- J 1. Align black insulation keyway with the outer contact's rivet key. Slide the inner contact assembly inside the outer contact body until fully seated. Observe the mating end of the assembly to make certain inner contacts are aligned as shown with the outer contact's orientation key.  
 2. Crimp outer contact body in the area indicated using crimp tools listed in table below.

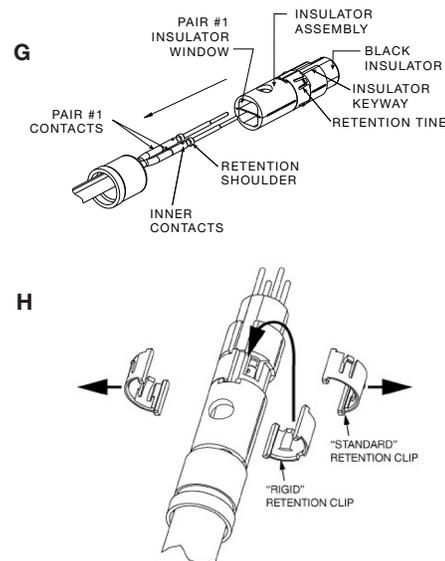


Amphenol Part Number	Description	Quadrax Cable Recommended	Inner Crimp Tools		Outer Crimp Tools	
			Tool (Setting)	Positioner	Tool	Die Set (Location)
21-033470-281	Quadrax Pin (100 Ohm)	GORE GSC-05-82559-0	M22520/2-01 (4)	Daniels K1777	M22520/5-01	M22520/5-45 (A) or Daniels Y1999 (A)
21-033471-281	Quadrax Socket (100 Ohm)					

**Contact Insertion into Connector**

Contacts are inserted by hand. Insert the contact assembly into the proper rear grommet hole. Contact must be aligned with hole and not inserted at an angle. The contact's orientation key must be in vertical alignment with the connector's main key or keyway (holding contact key and connector key/keyway at "12 o'clock" orientation position is recommended). Push forward until contact is felt to snap into position within the insert. Contact may need to be slightly rotated to properly align contact orientation key with connector insert keyway. Gently tug on cable to assure retention. Slide piggyback grommet seal into position inside the connector grommet and over the crimped end of the contact.

**Contact Removal from Connector** Remove piggyback grommet seal from the connector grommet. Position removal tool part number MIL-I-81969/14-12, Daniels DRK-264-8, around cable and slide tool toward connector until tool tips enter rear grommet and comes to a positive stop on the contact. Grip cable and simultaneously remove tool, contact and cable.

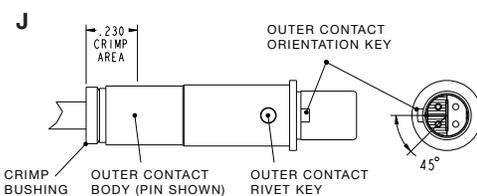

**Amphenol**

Amphenol Aerospace  
 40-60 Delaware Avenue • Sidney, New York 13838-1395  
 Website: www.amphenol-aerospace.com

**21-033470-281 (PIN)**  
**21-033471-281 (SOCKET)**


Contact, Pin and Socket, Quadrax, Split Pair,

Type M38999 Series I & III Box Pattern, Size 8 Installation Instructions


See table on reverse side for quadrax cable recommended, tool selector settings, crimping tool, positioner and insertion/removal tool information.

- A 1. Cut cable for assembly of quadrax contacts. Note: Inner wire conductors must be in correct orientation during contact assembly.
- B 1. Rubber end first, slide piggyback grommet seal back over cable jackets (not illustrated)
2. Strip cable jacket to expose cable outer braid as illustrated. Ends must be cut cleanly and at right angles to the axial plane of the cable. Cable must not be deformed while making cuts.
- C 1. Comb out and flair cable braid to expose inner wire.
2. Trim inner wires as illustrated.
- D 1. Bring braid forward and join to make bullet front.
2. Slide crimp bushing, large diameter end first, over cable braid until cable jacket are flush with front of crimp bushing.
- E 1. Flair cable braid back over crimp bushing as illustrated to expose inner wires. Trim excess cable braid.
2. Cut inner wire with foil in place to dimension shown. Wire must be cut to equal length.
3. Strip individual differential pair foil shield as close to flaired cable braid as possible.
4. Strip inner wires to expose center conductors as illustrated. Wire must be stripped to equal length.
- F 1. Carefully splay inner wires perpendicular to the axis of the cable as illustrated
2. Assemble inner contact over cable center conductor until fully seated against inner wire insulation. Observe center conductor through the contact's wire inspection hole, to make certain conductor is properly positioned.
3. Crimp inner contact to center conductor using crimp tools listed in table on back. Repeat steps F2 and F3 until all inner contacts are crimped.

**21-033470-281 (PIN)**  
**21-033471-281 (SOCKET)**

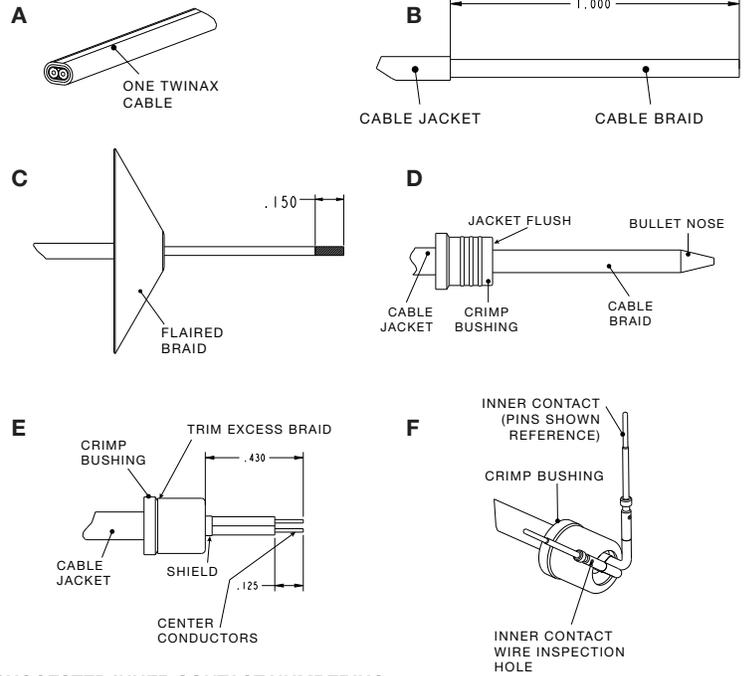

**SUGGESTED INNER CONTACT NUMBERING (MATING END SHOWN)**

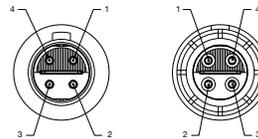

Amphenol Suggested Wiring		
Differential Pair	Inner ID	Wire Color
1	1	White
	4	White

Continued on back  
**L-2119-HY**  
**July 2022**




**FSCM77820**

**Amphenol**

Amphenol Aerospace  
 40-60 Delaware Avenue • Sidney, New York 13838-1395  
 Website: www.amphenol-aerospace.com

Contact Insertion into Connector  
 Contacts are inserted by hand. Insert the contact assembly into the proper rear grommet hole. Contact must be aligned with hole and not inserted at an angle. The contact's orientation key must be in vertical alignment with the connector's main key or keyway (holding contact key and connector key/keyway at "12 o'clock" orientation position is recommended). Push forward until contact is felt to snap into position within the insert. Contact may need to be slightly rotated to properly align contact orientation key with connector insert keyway. Gently tug on cable to assure retention. Slide piggyback grommet seal into position inside the connector grommet and over the crimped end of the contact.

Contact Removal from Connector  
 Remove piggyback grommet seal from the connector grommet. Position removal tool part number MIL-1-81969/14-12, Daniels DRK-264-8, around cable and slide tool toward connector until tool tips enter rear grommet and comes to a positive stop on the contact. Grip cable and simultaneously remove tool, contact and cable.

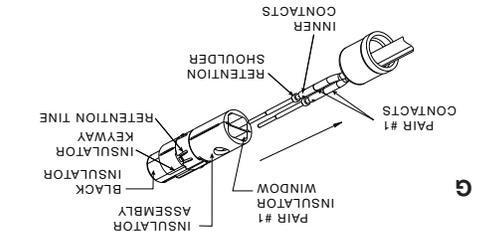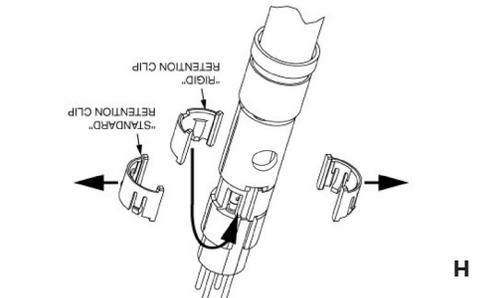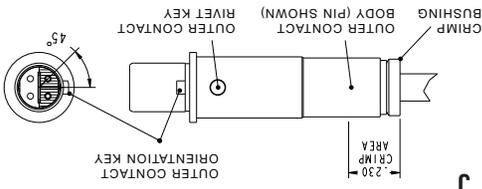

Amphenol Part Number	Description	Quadrax Cable Recommended	Outer Crimp Tools		
			Tool	Die Set (Location)	Positioner
21-033470-281	Quadrax Pin (100 Ohm)	GORE GSC-05-82559-0	M22520/2-01	(4)	Daniels K1777
21-033471-281	Quadrax Socket (100 Ohm)		M22520/5-45 (A)		M22520/5-01
					Daniels Y1999 (A)

- G 1. Observe the black insulator's keyway. When the inner pin assembly is held in the vertical position (with inner pin contacts on top), the inner pin contact's keyway to its right will be positioned at the inner contact ID #1 position as shown in the mating end view (for inner socket contacts, the black insulator keyway should be positioned to the left of the inner socket desired at the inner contact ID #1 position).
2. With inner contacts approximately aligned with the front insulator contact cavities (pair #1 inner contacts aligned with pair #1 insulator window, pair #2 inner contacts aligned with pair #2 insulator window), assemble front insulator over the inner contacts as shown, being careful to guide the inner contacts through the insulator cavities. The insulator must butt the crimp ferrule, and inner contact retention shoulders must click in front of the retention fins (inner contacts will lock in place).
- H 1. Hold insulator sandwich in position and use small pick to remove one "standard" contact retention clip.
2. Orient "rigid" retention clip such that internal retention features face mating end of contact assembly. Install clip by locking one rib into insulator retention slot then rotate until second rib locks into retention slot on opposite side of insulator. Encure Contact retention undercut is lined up with retention clip retention features.
3. Repeat steps 1 and 2 to replace second "standard" retention clip with second "rigid" retention clip.
  - \*\*Note: It is recommended to apply epoxy to contacts within insulator assembly due to cable "pistonning". Epoxy shall not interfere with inner socket interface nor be present on inner pin mating surface
- J 1. Align black insulation keyway with the outer contact's rivet key. Slide the inner contact assembly inside the outer contact body until fully seated. Observe the mating end of the assembly to make certain inner contacts are aligned as shown with the outer contact's orientation key.
2. Crimp outer contact body in the area indicated using crimp tools listed in table below.